


Gander Floor Lamp

Model# 7007-01

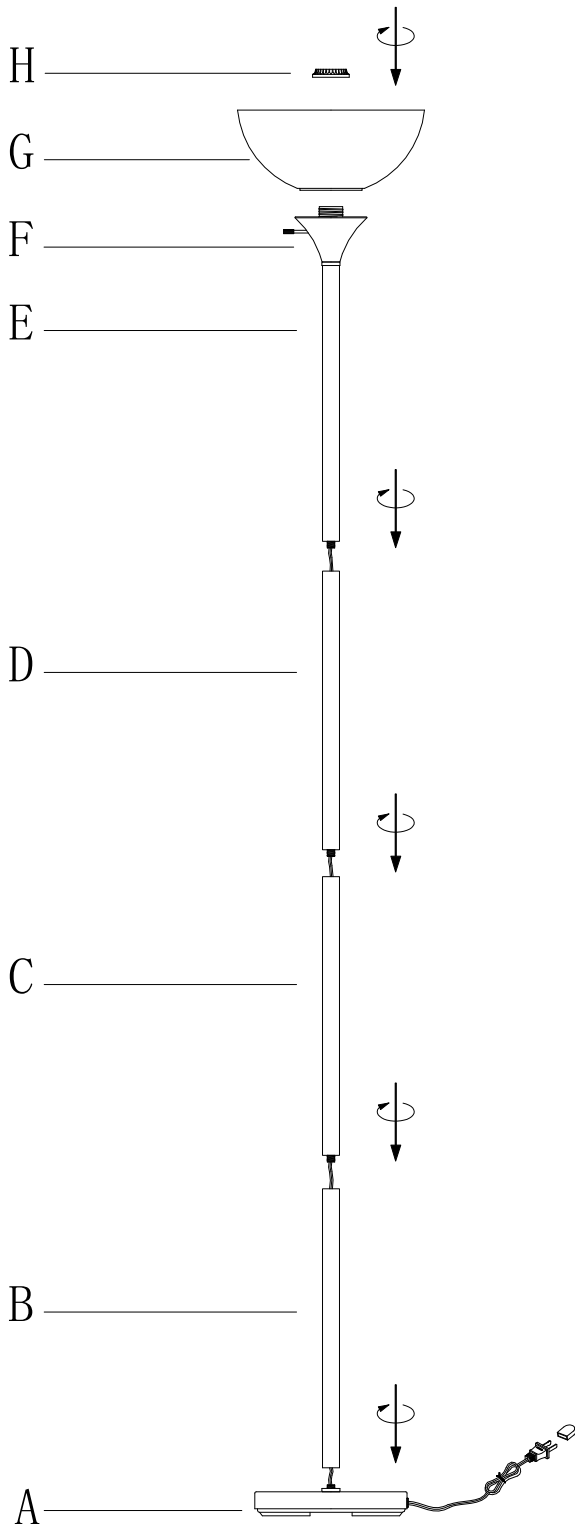

1. Screw pole (B) clockwise onto base (A) until tighten and screw pole (B), (C), (D),(E) and shade holder (F) together .

You may need to pull any excess cord gently through the poles so that these two parts fit.

2. Unscrew pre-assembled socket ring (H) from shade holder (F).

3. Place the shade (G) onto shade holder (F)..and tighten it by socket ring (H) to secure the shade (G).

GENERAL PRODUCT INFORMATION:

This product is suitable for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug as a feature to reduce the risk of electric shock (one blade is larger than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless the plug can be fully inserted. **DO NOT ALTER THE PLUG .**

BULB TYPE: Use only with one type A Max 150W 3-Way bulb (bulb not included).

PARTS DIAGRAM

(1) * socket ring (H)