


ASSEMBLY INSTRUCTIONS FOR HAMILTON FLOOR LAMP

3377-15 1.0

Model # 3377-15

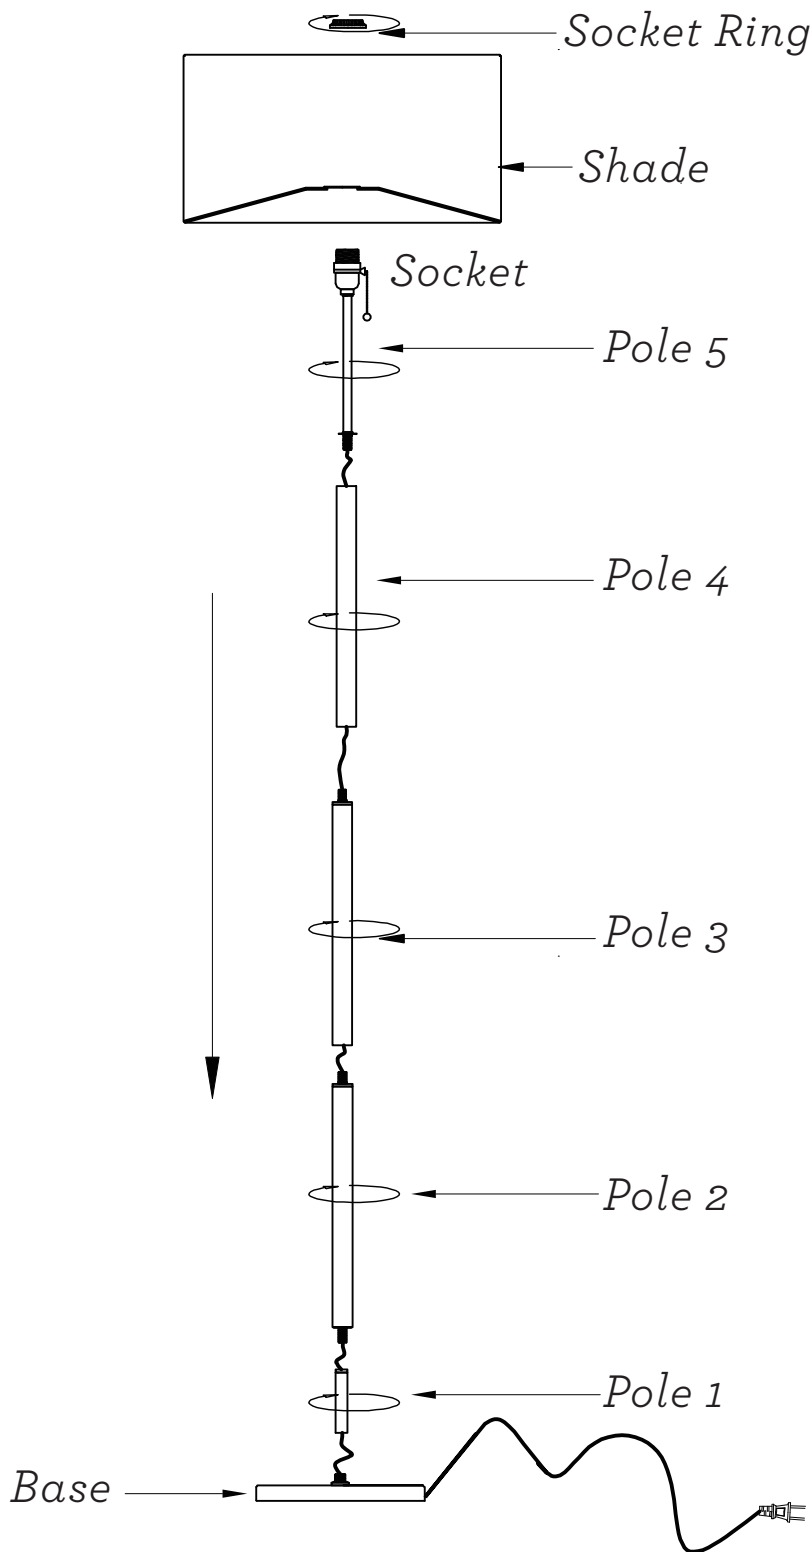

1. Remove all parts and lay on a flat surface.
2. Screw pole 1 clockwise into base to tighten.
3. Screw pole 2 clockwise into pole 1 to tighten.
4. Screw pole 3 clockwise into pole 2 to tighten.
5. Screw pole 4 clockwise into pole 3 to tighten.
6. Pull the remaining slack of the power cord out carefully through base and screw pole 5 clockwise into pole 4 to tighten.
7. Set shade on socket and tighten clockwise with socket ring to secure shade before screwing in light bulb.

GENERAL PRODUCT INFORMATION:

This product is suitable
for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. DO NOT ALTER THE PLUG.

BULB TYPE: (1) 150 watt incandescent or 42 watt CFL equivalent. (not included)