


ASSEMBLY INSTRUCTIONS FOR Carson Floor Lamp

3841-22 1.0

Model # 3841-22

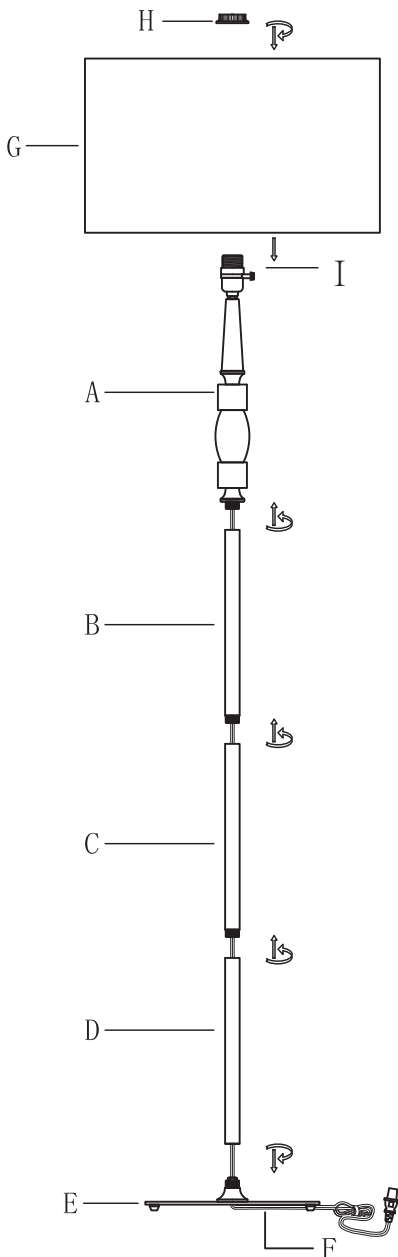

Remove all parts and lay on a flat surface.

1. Screw pole(B) clockwise into pole(A) to tighten.
2. Screw pole(C) clockwise into pole(B) to tighten.
3. Screw pole(D) clockwise into pole(C) to tighten.
4. Screw pole (D) clockwise into base (E) to tighten.
Then get the remaining slack of the power cord out carefully from point(F) .
5. Place shade (G) onto the socket(I), and tighten clockwise with socket ring(H) to secure shade.

GENERAL PRODUCT INFORMATION:

This product is suitable for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. **DO NOT ALTER THE PLUG.**

BULB TYPE: (1) 150Watt 3-way incandescent or 42Watt CFL equivalent bulb(not included).