



# ASSEMBLY INSTRUCTIONS FOR CRANE LED FLOOR LAMP

Model # AD9101


1.

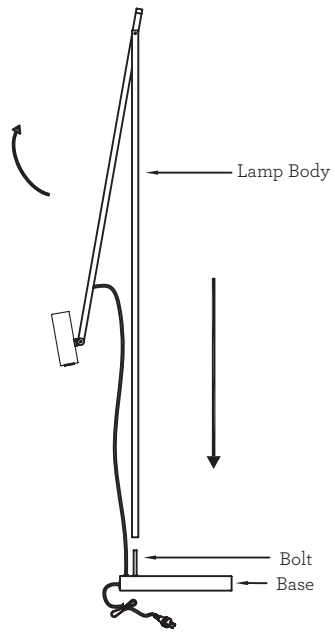


2.

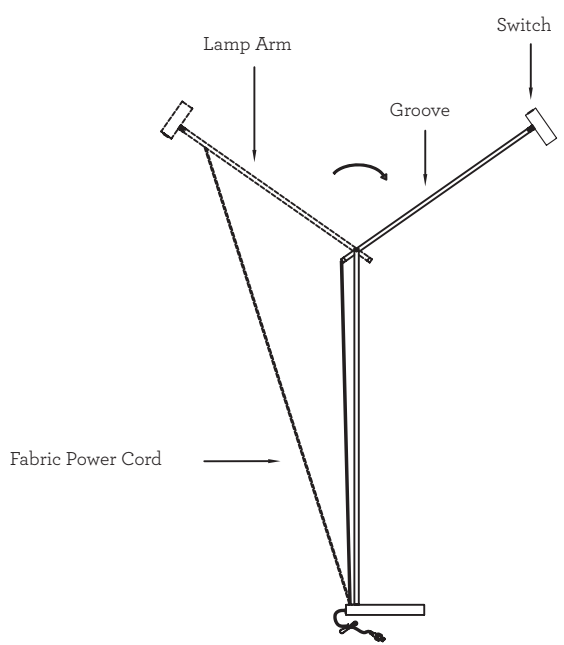

3.

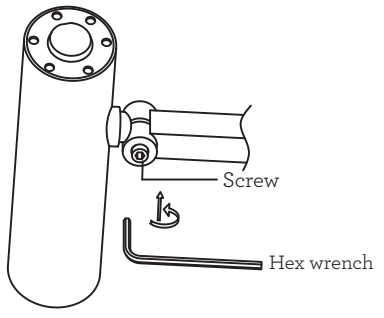


1. Insert the lamp body into bolt of lamp base and ensure it is secure.
2. Neatly place the fabric power cord into the groove on top of the lamp arm, make sure switch is facing upward. Rotate lamp arm and ensure fabric power cord fits smoothly.
3. If the shade gets loose, tighten screws on shade joint using hex wrench to secure.

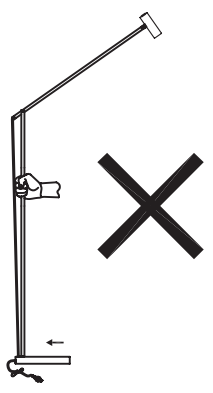

**Caution:**  
For your safety, do not move the lamp by grabbing only the lamp body directly, in order to avoid heavy base falling down to the ground.

**GENERAL PRODUCT INFORMATION:**

This product is suitable for dry locations only.



BULB TYPE: (1) 8 watt LED included.

